


1. Mount the radio to the DDIN Brackets with the screws supplied with the unit. (Figure A)

2. Locate the factory wiring harness in the dash.


Re-connect the negative battery terminal and test the unit for proper operation.

3. Mount the radio/bracket assembly into the dash. (Figure B)


4. Snap the radio trim plate over the radio/bracket assembly and reassemble dash in reverse order of disassembly. (Figure C)

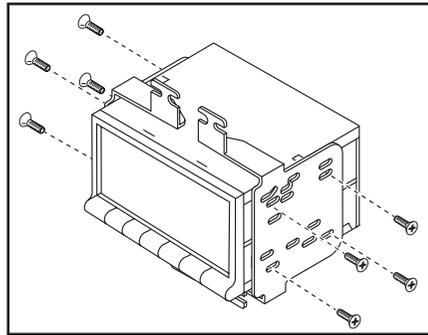

(Figure A)

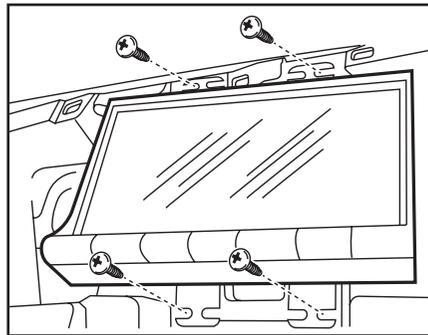

(Figure B)

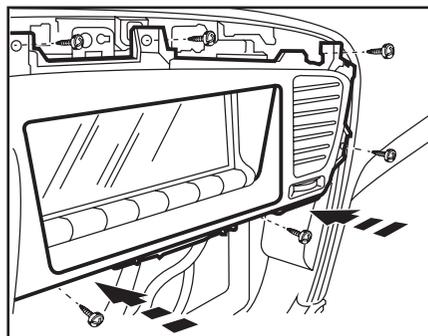

(Figure C)




## Installation Manual

• Kia Optima 2011->

colour / part-no.:  
black: 381178-34


Compatible with these double DIN devices

### Double-DIN Navigation

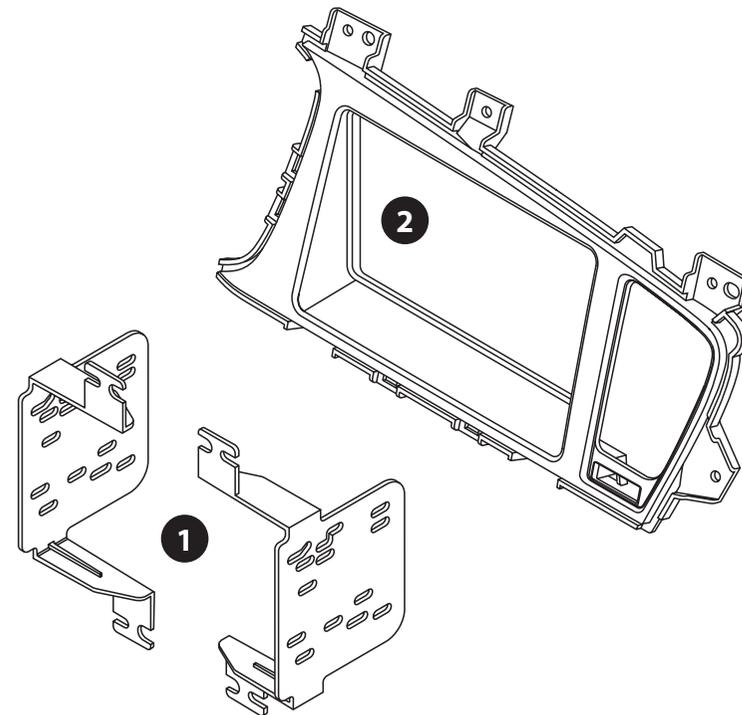


- (1) mounting brackets
- (2) facia plate


1. Unsnap and remove trim from around top center to passenger side dash. (Figure A)
2. Unsnap panel from outside edge of driver's side dash. (Figure B)
3. Remove two screws from knee panel and pull top of panel back so it doesn't overlap the instrument cluster. (Figure C)
4. Remove two screws from the driver's side vent trim and remove. (Figure D)

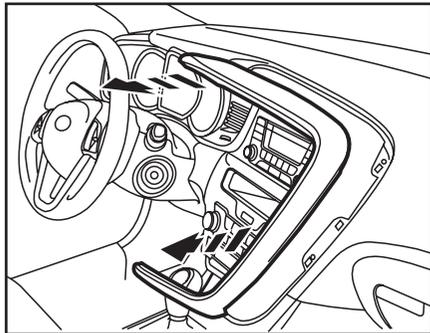


(Figure A)

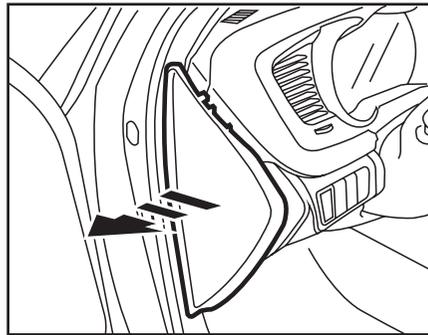

(Figure B)

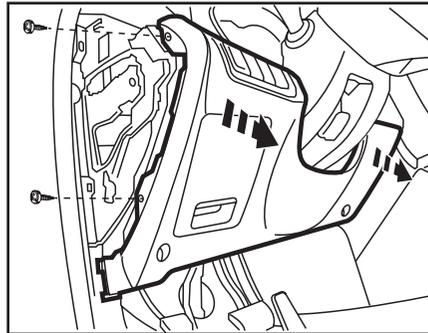


(Figure C)

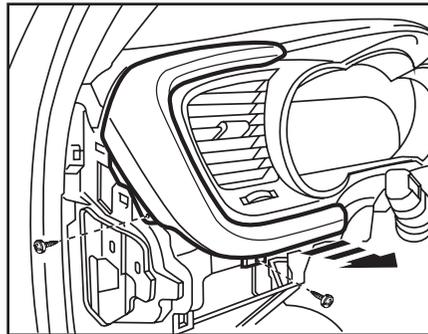


(Figure D)


5. Remove five screws from instrument cluster and remove. (Figure E)
6. Remove four screws from the climate controls and remove. (Figure F)
7. Remove six screws securing the radio trim panel and remove. (Figure G)
8. Remove four screws securing the factory radio chassis and remove it. (Figure H)

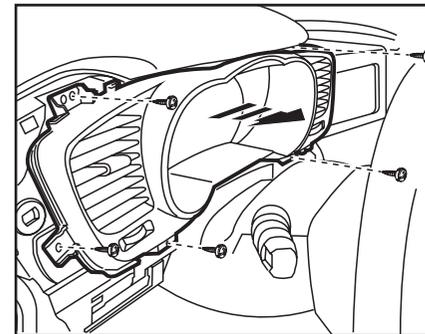


(Figure E)

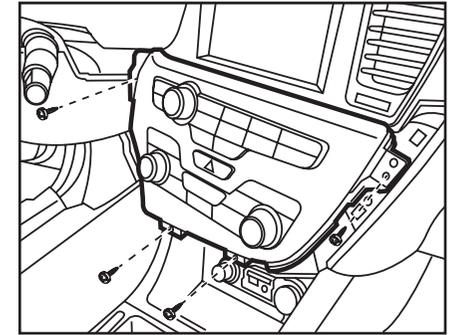

(Figure F)

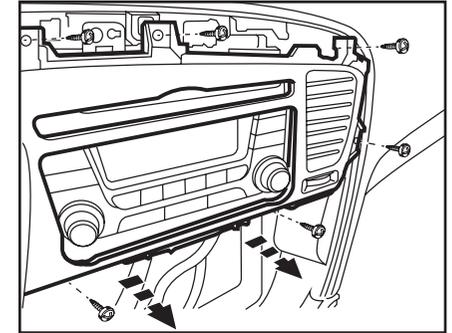

(Figure G)

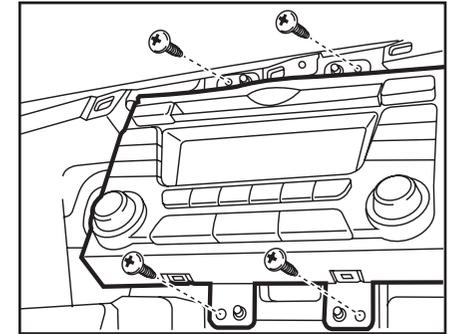

(Figure H)

*remove and install air vents*

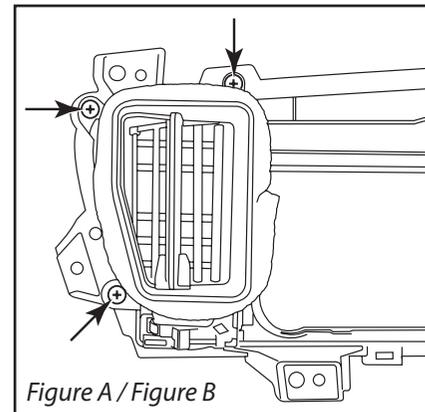


Figure A / Figure B

1. Remove three screws and remove the vent from the factory radio panel. (Figure A)
2. Using the supplied #8 x 3/8" pan head phillips screws, install the vent to the kits trim panel. (Figure B)